


AMANA®

30" ELECTRIC FREESTANDING RANGE (Radiant Elements)

MODELS:

AER6603SMS0 (Stainless)


COOKTOP PARTS

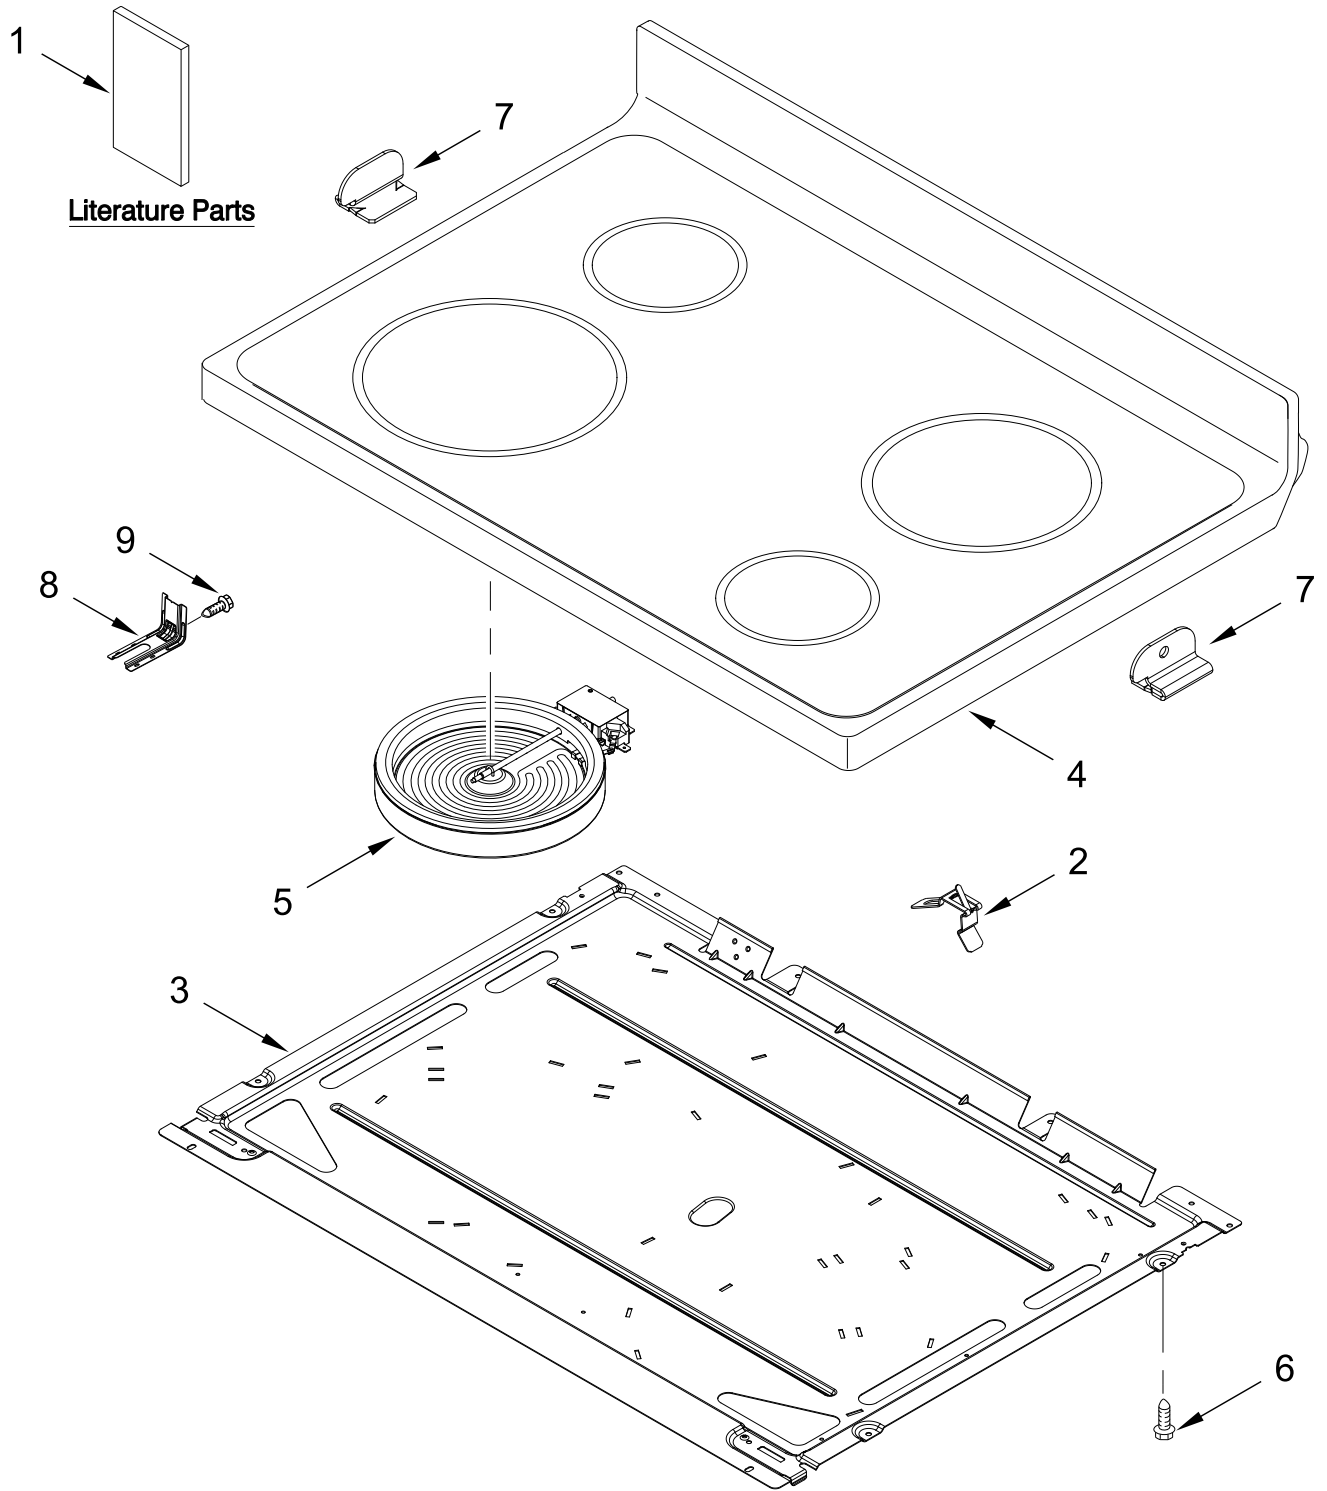

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	8273993	Element (1800W) (Right Rear)	8	W11379945	Bracket, Anti-Tip
	W11469631	Quick Start Guide		8273994	Element (1200W) (Right Front and Left Rear)	9	7101P485-60	Screw, Anti-Tip Kit
	W11509598	User Instructions						FOLLOWING PARTS NOT ILLUSTRATED
	W11393929	Sheet, Tech						
2	W10225448	Spring, Element		W10275048	Element (3000/1400W) (Left Front)		W11452623	Harness, Main
3	W10691223	Pan, Radiant Element					W11134603	Harness, Cooktop (Left)
4		Cooktop						
	W10853125	Black	6	3196169	Screw		W11134551	Harness, Cooktop (Right)
			7	W10607641	Bracket, Cooktop (Left)			
				W10607642	Bracket, Cooktop (Right)			


CONTROL PANEL PARTS

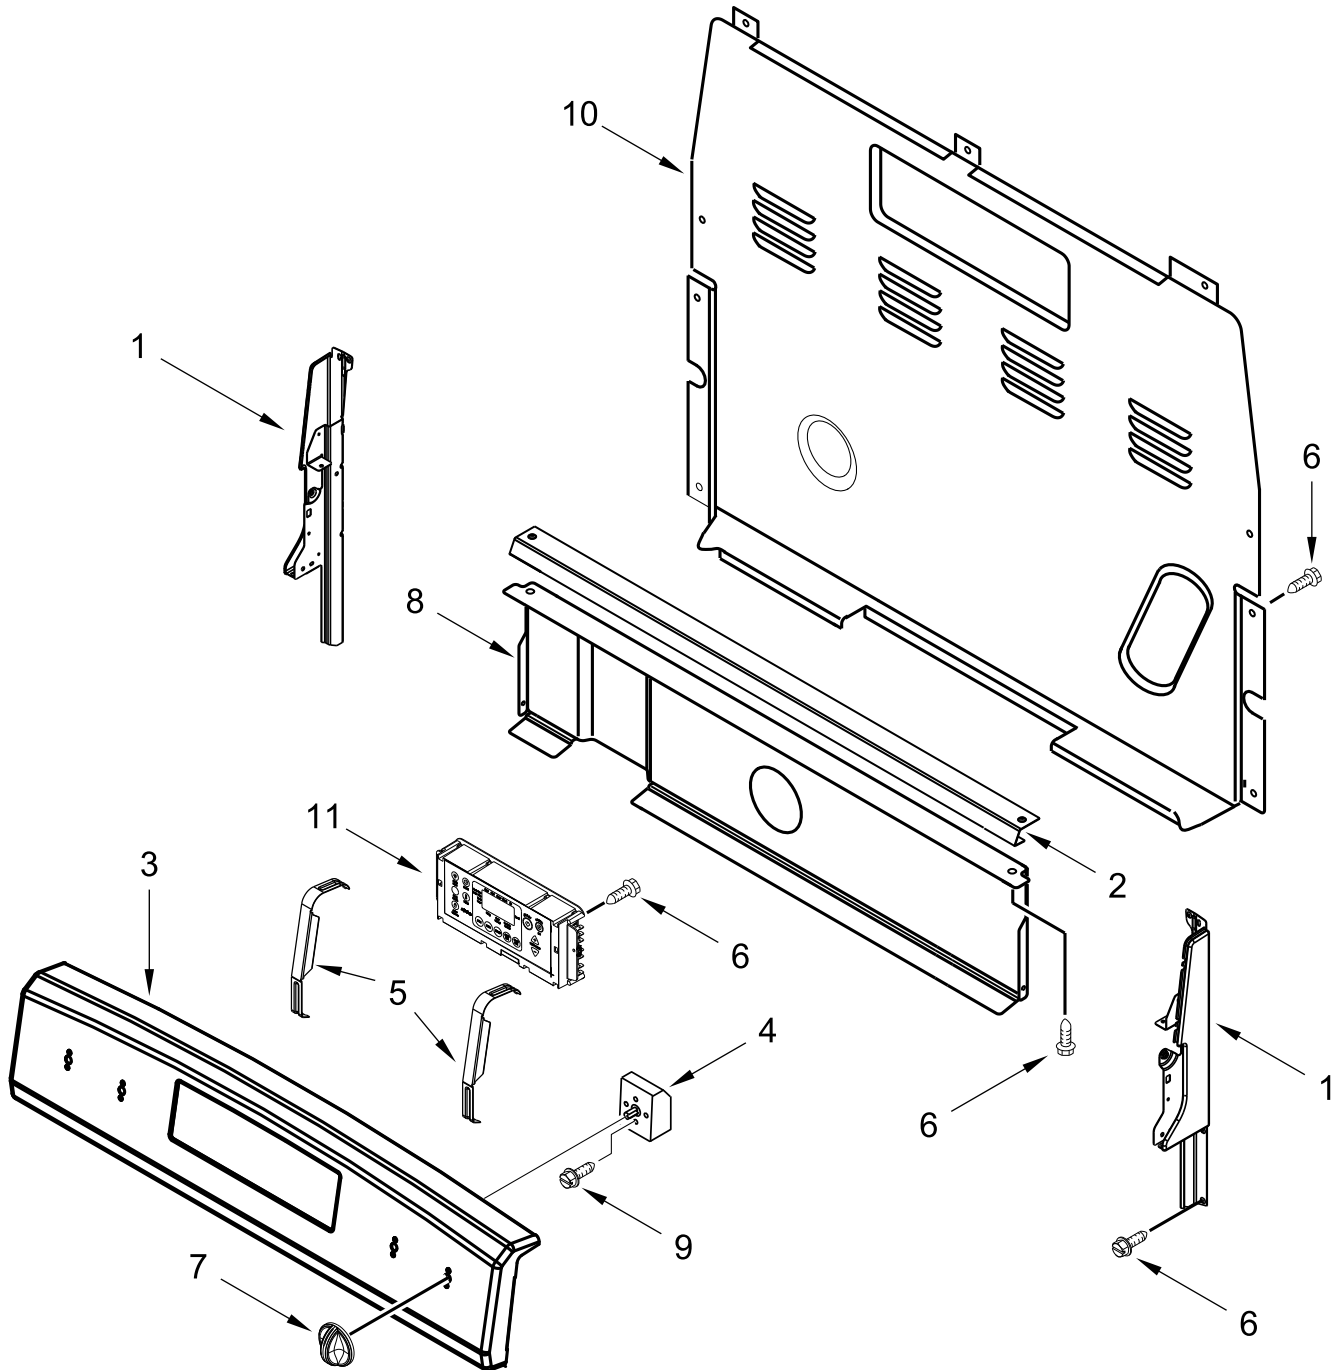

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148951	Switch, Infinite	7		Knobs
	W11130372	Black (Left)			(Right Front and Left Rear)		W10844801	Black
	W11130379	Black (Right)				8	W10134247	Shield, Heat
2	W10525121	Bracket, Console Mounting		3148953	Switch, Infinite (Green)	9	3400882	Screw
					(Right Rear)	10	8272473	Cover, Upper Rear
3		Panel, Console		W10434452	Switch, Infinite (Dual)	11		Control, Electronic (LCX)
	W11157021	Stainless			(Left Front)		W11515098	Black
			5	W10695491	Bracket, Control			
			6	3196178	Screw			


CHASSIS PARTS

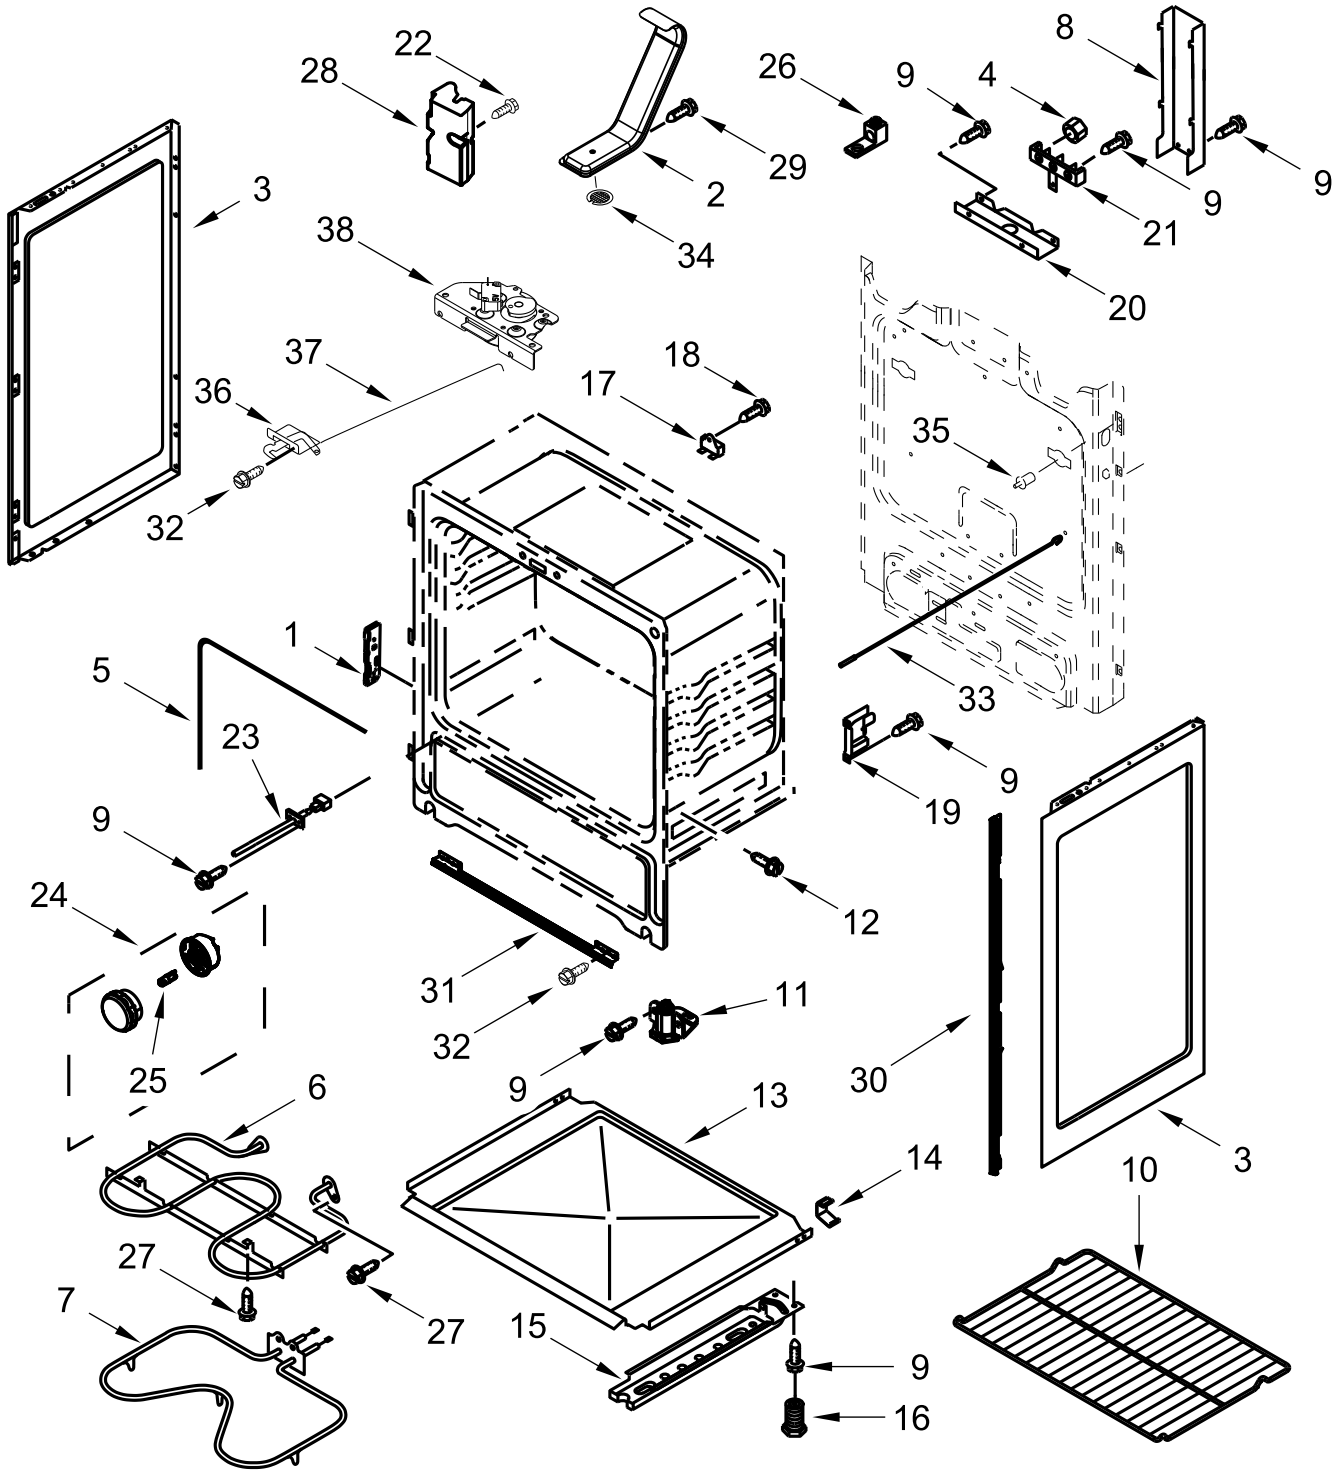

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	17	3196548	Fuse, Thermal	34	W11092984	Screen, Vent
2	W10134285	Tube, Vent	18	3196172	Screw	35	W10627802	Switch, Door
3		Panel, Side	19	W10404688	Clip, Oven Support	36	9761013	Front Door Latch Assembly
	W10162245	Black	20	3186034	Bracket, Service			
4	3400029	Nut	21	W10245259	Block, Terminal	37	W10078380	Rod, Latch
5	W11491751	Seal, Door	22	W11034869	Screw	38	W10107820	Rear Door Latch Assembly
6	9757340	Element, Broil	23	W10181986	Sensor, Oven			
7	W11111743	Element, Bake	24	W11544377	Light Assembly			FOLLOWING PARTS NOT ILLUSTRATED
8	W10326122	Cover, Terminal Block	25	W10571723	Bulb, Halogen 40 Watts			
9	3196169	Screw					W10333344	Insulation, Flue
10	W11173792	Rack, Oven	26	W10281322	Kit, Bare Wire Adapter Block		W10774939	Insulation, Wrap
11	W10341186	Front Foot Assembly					W11127325	Insulation, Back
12	W10067840	Screw	27	3196154	Screw			
13	8054068	Retainer, Insulation	28	W10910404	Counterweight			
14	W10137382	Clip, Panel	29	W10362924	Screw			
15	W10390007	Base Rail Assembly (Right)	30	W11510560	Barrier Rail, Rubber (Left & Right)			
	W10390008	Base Rail Assembly (Left)	31	W11464547	Bracket, Front Frame			
16	W10058460	Foot, Leveling	32	3196560	Screw			
			33	9757239	Rod, Door Switch			

DOOR PARTS

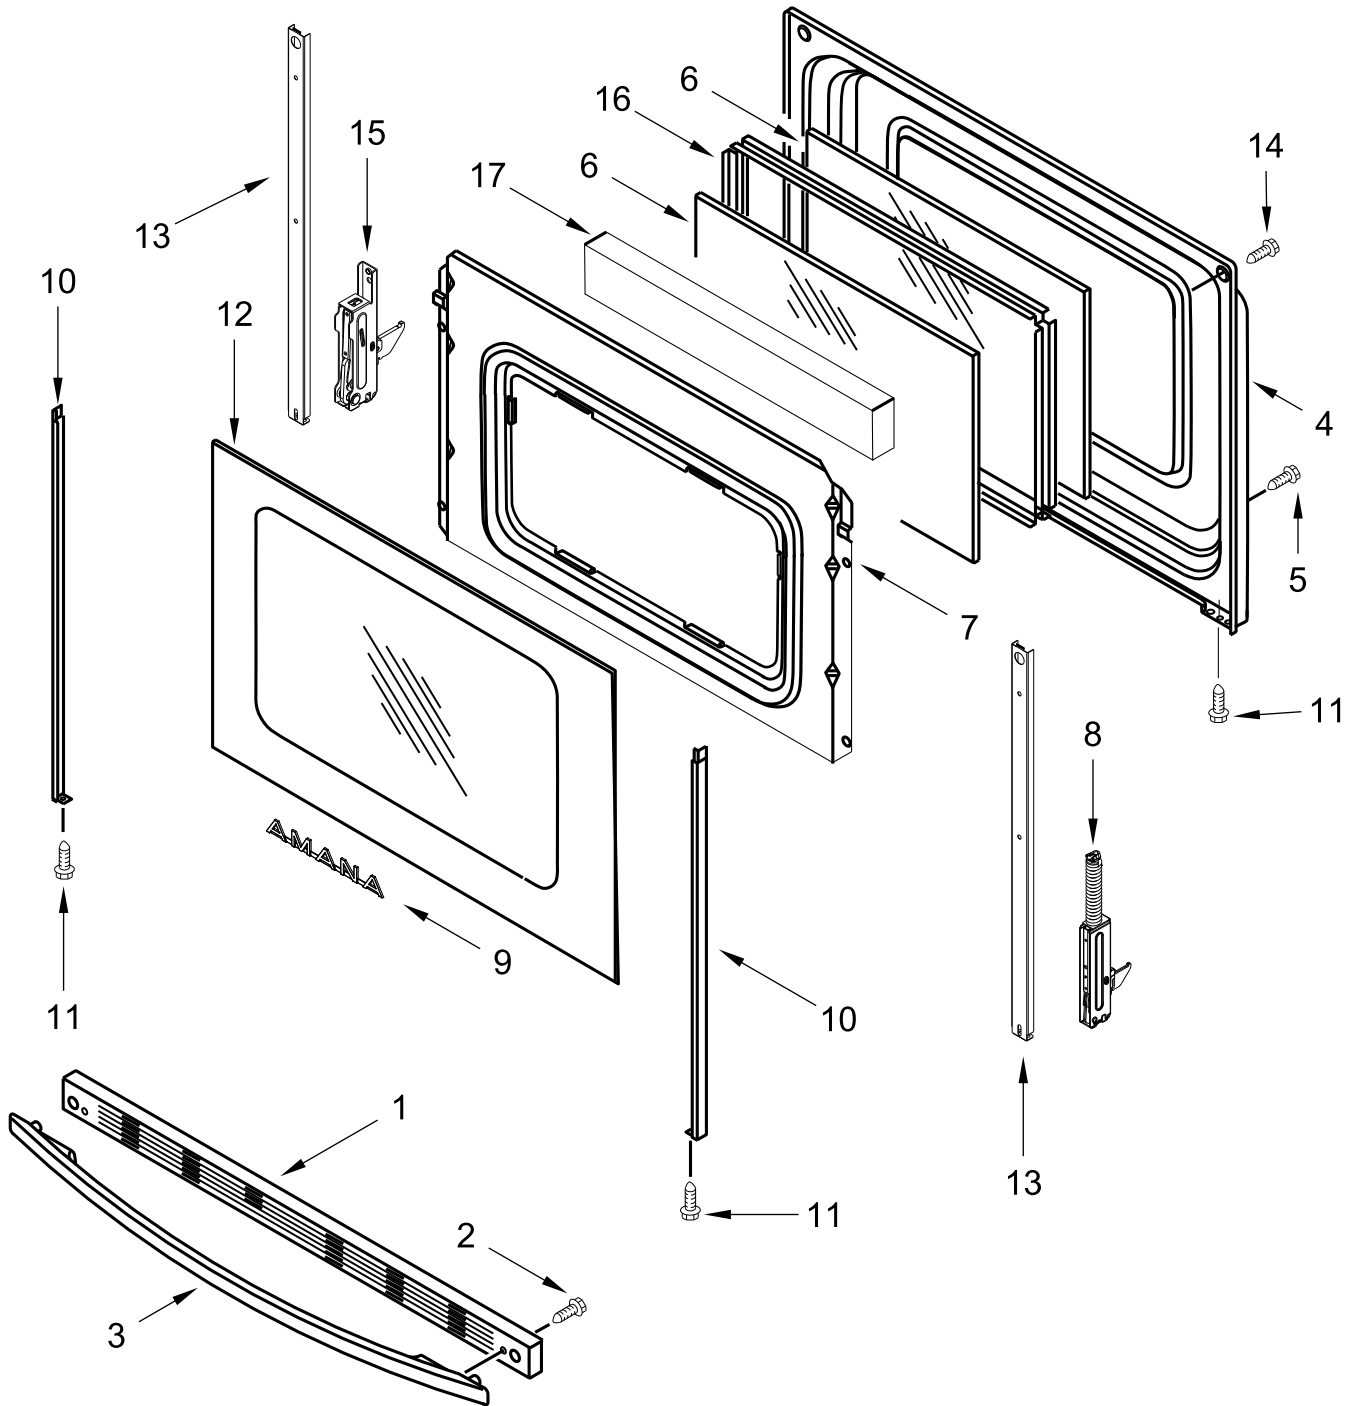


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10155511	Screw
3		Handle, Door
	W10144883	Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	9761357	Retainer, Insulation

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10299224	Hinge, Active (With Spring)
9		Badge
	W10846752	Stainless
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12		Glass Assembly, Outer Door
	W11603159	Stainless
13	W11379944	Strap, Door
14	W10200660	Screw
15	W10299227	Hinge, Door (Passive)
16	W10316950	Frame, Glass
17	W10278991	Insulation, Door Strip

DRAWER AND BROILER PARTS

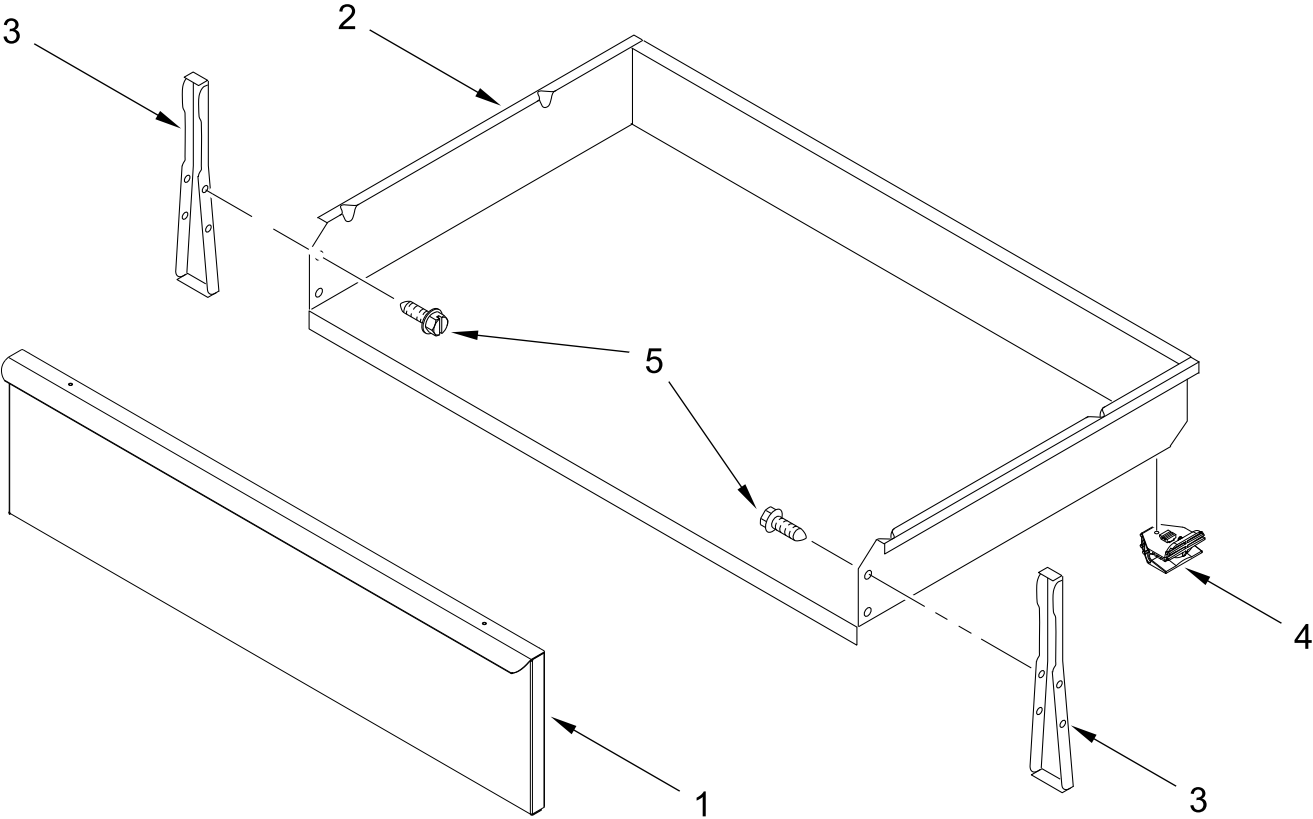

DRAWER AND BROILER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462910	Bracket, Mounting Drawer	4	W10674708	Glide, Drawer Rear
	W10330070	Stainless					W10674705	Glide, Drawer Front
2	W10688022	Drawer, Storage				5	3196165	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	8212473	Universal Silver
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	3191048	Glass Cleaner
	4396923	Broiler Pan and Grid