

AMANA®


ELECTRIC RANGE

MODELS:

ACR4203MNB0 (Black)

ACR4203MNB0 (White)


COOKTOP PARTS

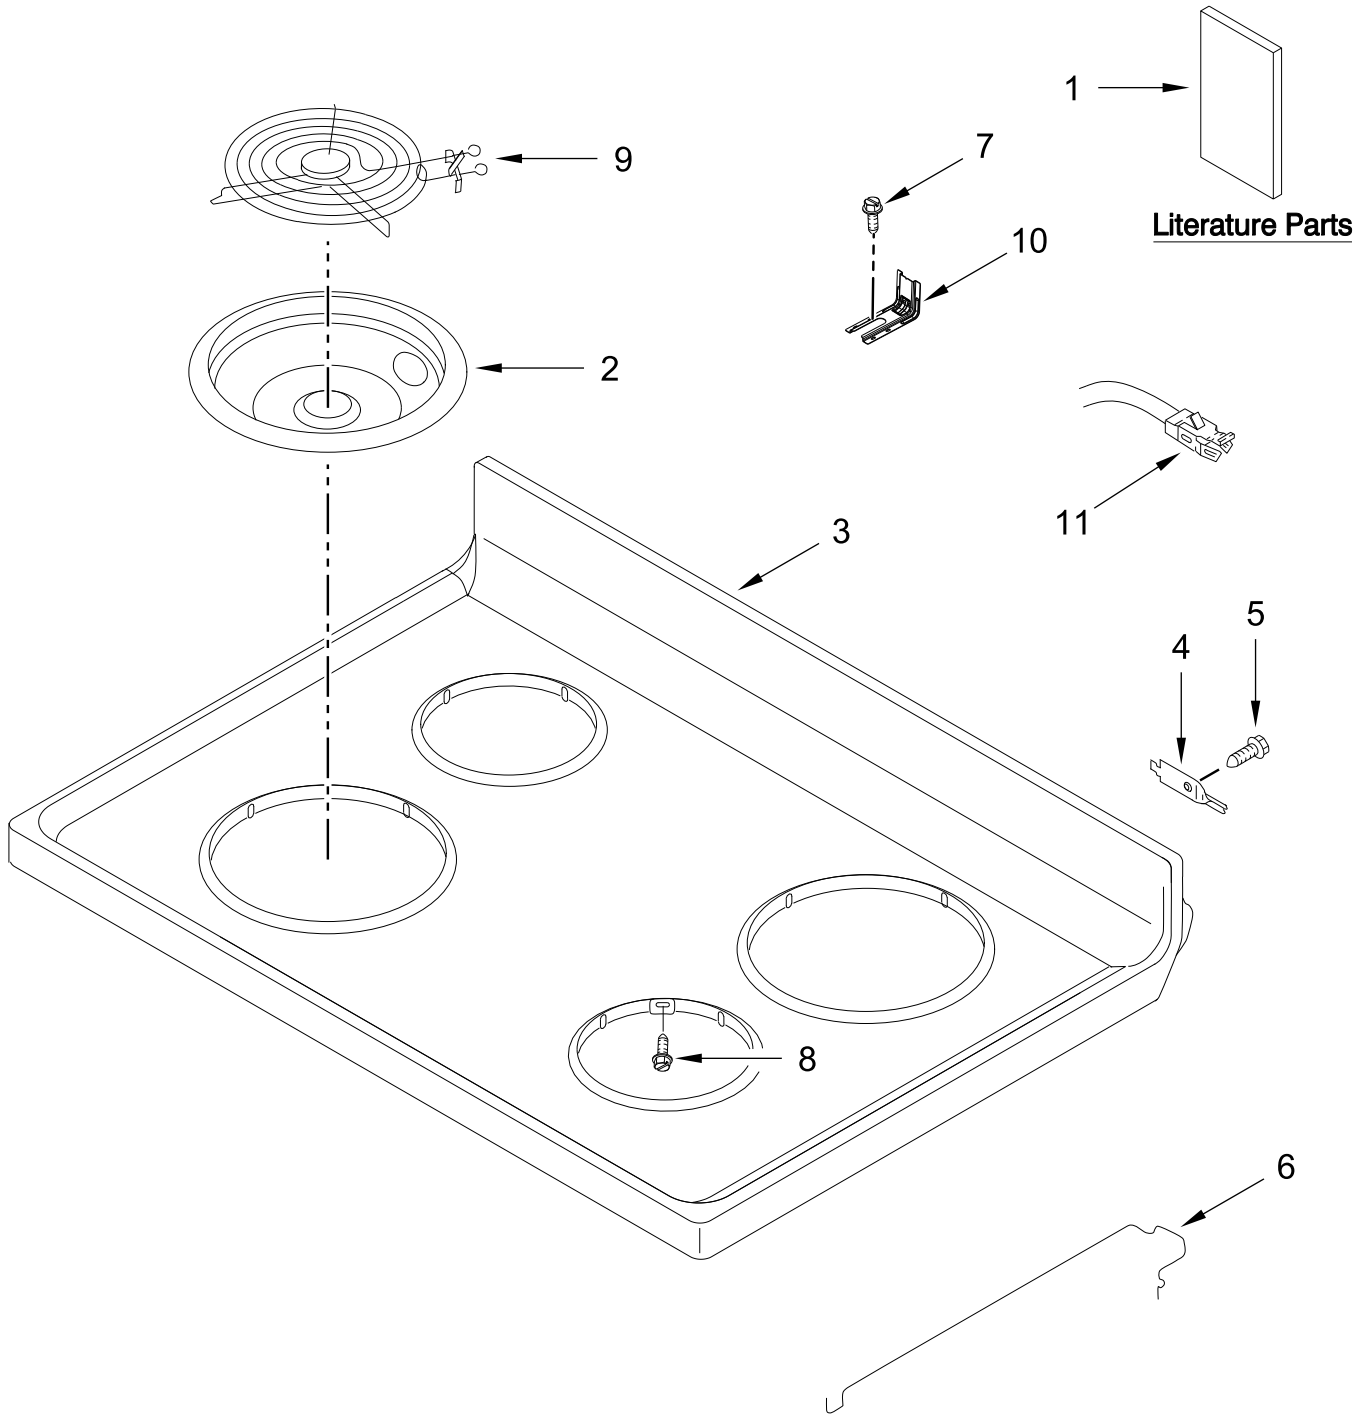

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	3195060	Hinge, Cooktop	11	814399	Receptacle, Element
	W11509598	User Instructions	5	3196178	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11481065	Quick Start Guide	6	3195812	Rod, Support			
	W11488793	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit		W11452639	Harness, Main
2	W10196406	Bowl, Drip (6 in) (Right Front and Left Rear)	8	3196154	Screw		W11134595	Harness, Cooktop
	W10196405	Bowl, Drip (8 in) (Left Front and Right Rear)	9	W11364019	Element, Coil Heating (2400W) (Left Front and Right Rear)		W10281322	Kit, Bare Wire Adapter Block
				W11364018	Element, Coil Heating (1500W) (Right Front and Left Rear)			
3		Cooktop						
	3186233	Black						
	3186231	White	10	W11379945	Bracket, Anti-Tip			


CONTROL PANEL PARTS

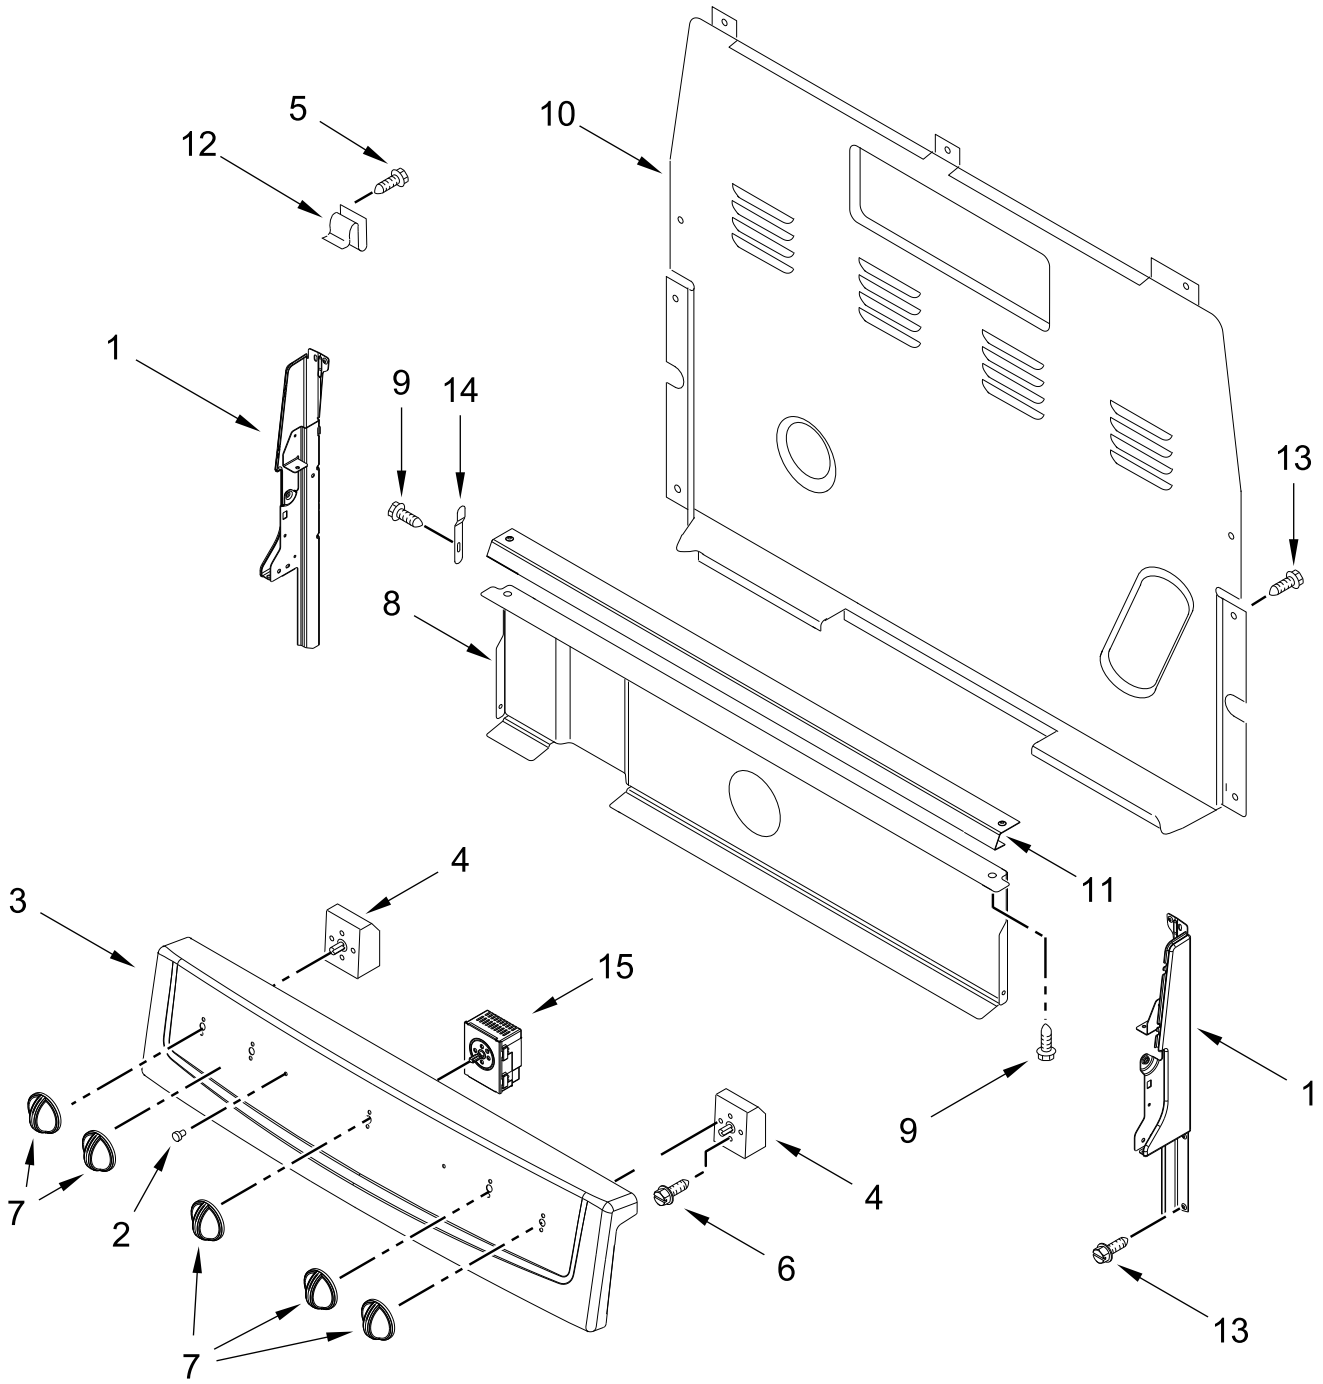

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	8	W10134247	Shield, Heat
	W11130372	Black (Left)			(Right Front and Left Rear)	9	3196165	Screw
	W11130379	Black (Right)				10	8272473	Cover, Upper Rear
	W11130371	White (Left)				11	W10525121	Bracket, Console Mounting
	W11130378	White (Right)		3148954	Switch, Infinite (Orange)	12	8273564	Clip, Rear Upper Cover
2	3196068	Lens, Indicator			(Left Front and Right Rear)	13	3196178	Screw
3		Panel, Control				14	3196200	Clip, Spring
	W11657432	Black	5	3196169	Screw	15	9762215	Control, Electric
	W11609220	White	6	3400882	Screw			
			7		Knob, Infinite			
				W10844801	Black			
				W10844800	White			


CHASSIS PARTS

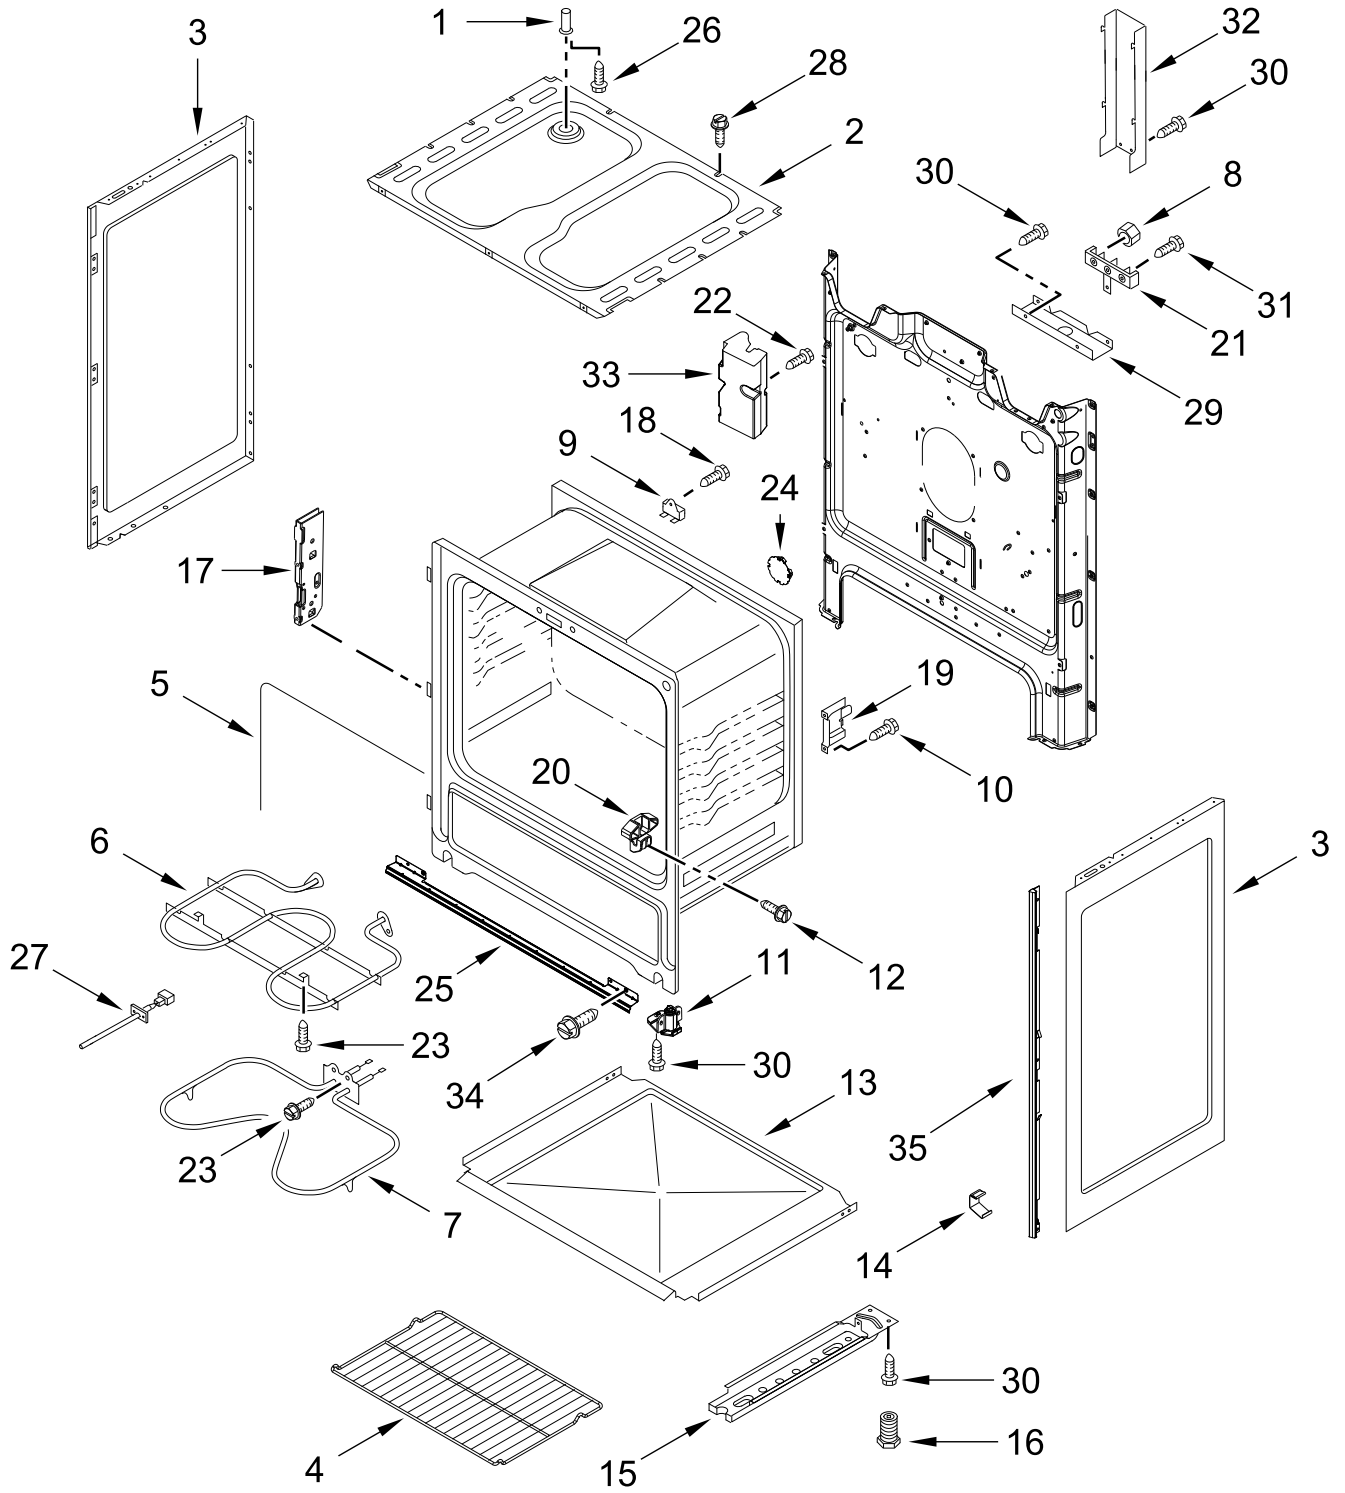

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	15	W10390008	Base Rail Assembly (Left)	27	W10181986	Sensor, Oven
2	W10209613	Box, Burner				28	3196165	Screw
3		Panel, Side		W10390007	Base Rail Assembly (Right)	29	3186034	Bracket, Service
	W10162245	Black				30	3196178	Screw
	W10575396	White	16	W10058460	Foot, Leveling	31	3400016	Screw
4	W11173792	Rack, Oven	17	W10289077	Receiver, Hinge	32	W10326122	Cover, Terminal Block
5	W10129032	Seal, Door	18	3196172	Screw	33	W10910404	Counterweight
6	W10308476	Element, Broil	19	W10404688	Clip, Oven Support	34	3196560	Screw
7	W11022836	Element, Bake	20	W10674705	Glide, Drawer Front	35	W11510560	Barrier Rail, Rubber (Left and Right)
8	3400029	Nut	21	W10245259	Block, Terminal			
9	3196548	Fuse, Thermal	22	W11034869	Screw			FOLLOWING PARTS NOT ILLUSTRATED
10	3196169	Screw	23	3196174	Screw			
11	W10341186	Front Foot Assembly	24	W11047127	Hole, Cover Light	8273263		Insulation, Wrap
12	W10067840	Screw	25	W11464547	Bracket, Front Frame	8272611		Insulation, Back
13	8054068	Retainer, Insulation	26	3196567	Screw			
14	W10137382	Clip, Panel						

DOOR PARTS

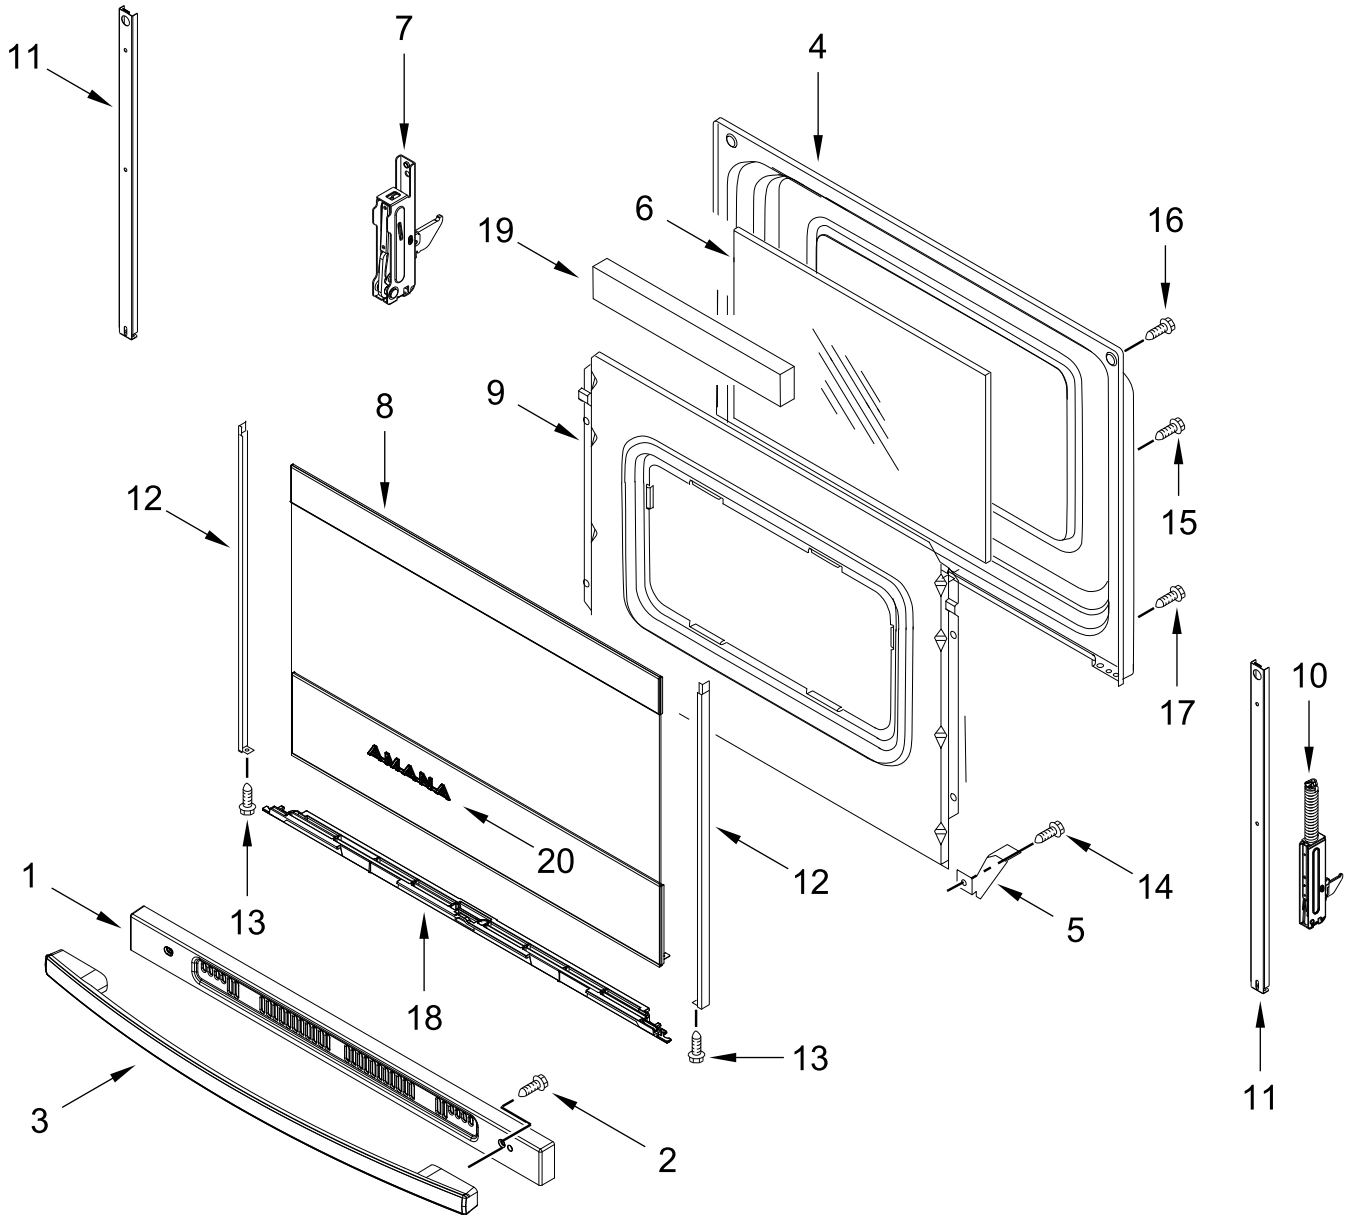


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
	W10310920	White
2	W10168559	Screw
3		Handle, Door
	W10323589	Black
	W10323588	White
4	9761342	Liner, Door
5	W10137382	Clip, Panel
6	W11367326	Glass, Inner
7	W10299227	Hinge, Door (Passive)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8		Glass Assembly, Outer Door
	W11608533	Black
	W11608538	White
9	9761504	Retainer, Insulation
10	W10299225	Hinge, Active
11	W11379944	Strap, Door
12		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10327235	Screw
14	3196165	Screw
15	W10031790	Screw
16	W10200660	Screw
17	W10031780	Screw
18		Trim, Lower Door
	W11444043	Black
	W11444042	White
19	W10278991	Insulation, Door Strip
20		Badge
	W10846751	Black
	W10849465	White

DRAWER PARTS

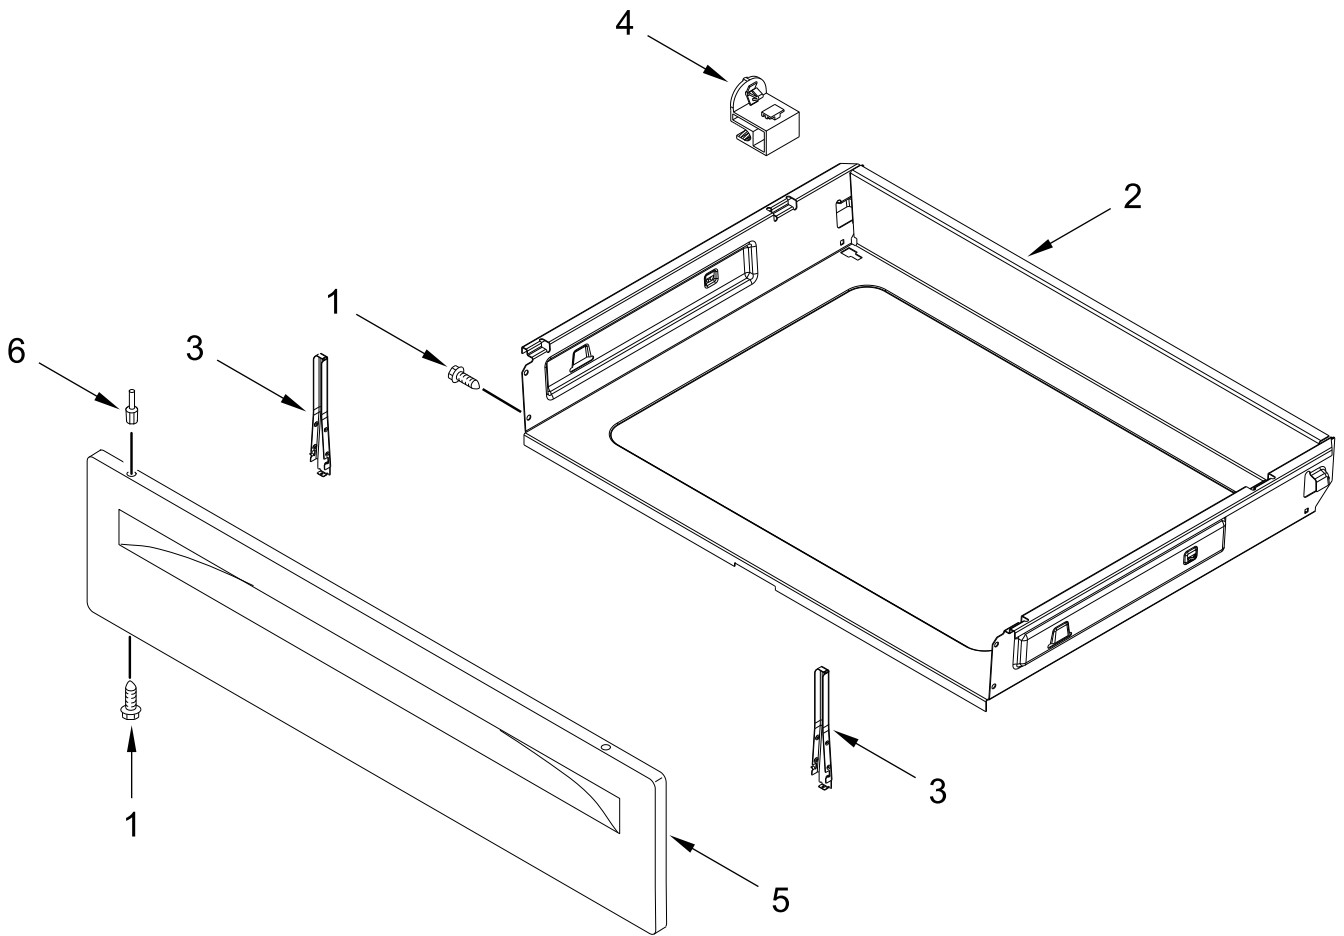

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	5		Panel, Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123900	Black		3196813	Black
3	W10462912	Bracket, Mounting Drawer		W11123901	White		3196814	White
4	W10674708	Glide, Drawer Rear						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid